RealBark

Assembly Instructions For QuadPod w/ Shooting Rail Only

READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY




Attach Uprights to Shooting Rail w/ bolts, nuts and washers. Insert bolts from inside the shooting ring. After installing all four (4) uprights, slip shooting rail assembly into Platform Sockets and secure with thumb screws. Height of shooting rail can be adjusted from bottom w/ thumb screws.

HARDWARE SCHEDULE

(A) 4 - Thumb Screws
(B) 4 - 5/16" X 2 1/2" Hex Head Bolts
(C) 4 - 5/16" Lock Washers

(D) 4 - 5/16" Hex Nuts

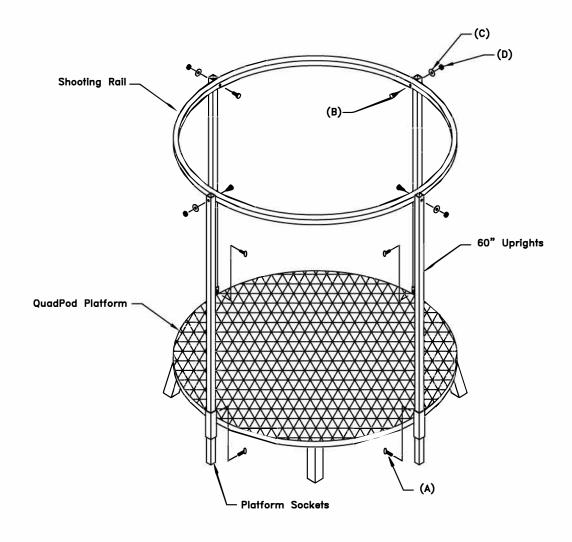


If purchased, QuadPod Wrap Around Covers can be attached at this time.


RealBark® Assembly Instructions For QP-12 QuadPod

Carefully lay the platform top on its side. Insert three legs into the sockets of the ring furthest from the ground. Secure legs by installing the 1"x 1/2" jam bolts into the nuts welded to each leg socket as shown in DETAIL 1. Tighten bolts securely (overtightening bolts may result in damage to legs.)

Attach the leg braces, as shown in DETAIL 2, by installing the 5/16" x 3" bolts through the brace and into the leg, at each end. Braces will mount top to bottom around perimeter, utilizing only one set of holes, at each end of each leg. Hand tighten only, until all braces are installed.

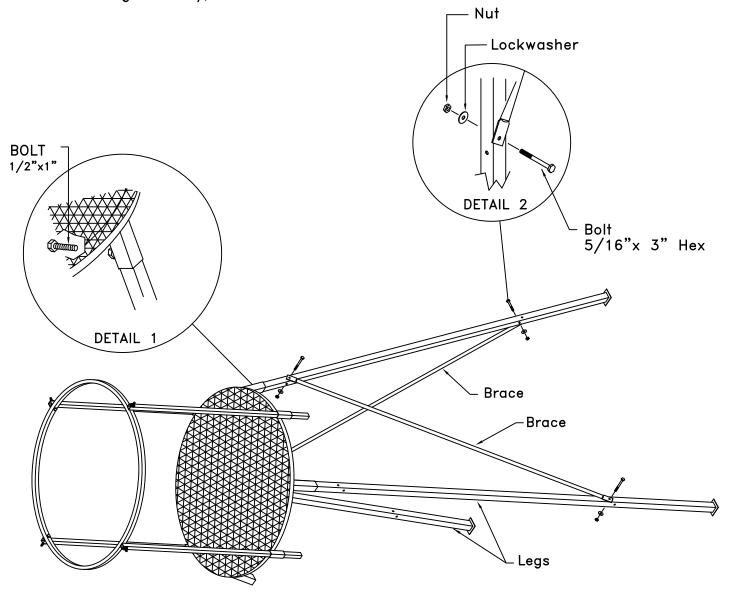


RealBark® Assembly Instructions For QP-12 QuadPod

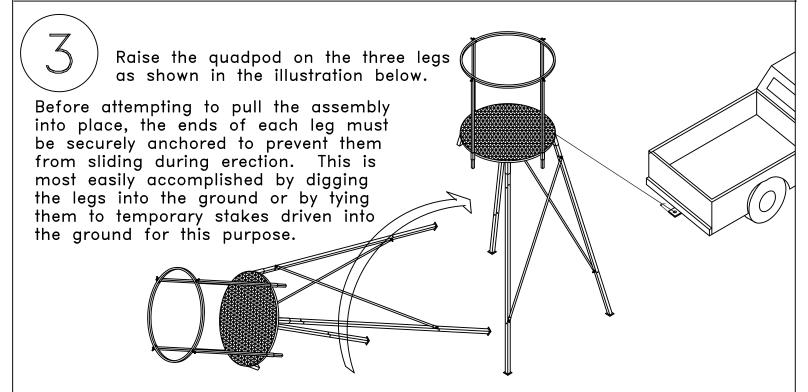

CAUTION: Never stand under or near the QuadPod as it is raised to its full upright position. Use extreme caution to prevent pulling QuadPod past vertical.

The assembly must be raised by hand or assisted in its assent until the top ring is 4 to 5 feet off the ground to prevent accidental buckling of the legs. Do not use a type of rope or strap which will stretch, as the elastic action could snap the assembly past vertical and possibly over. A safety rope secured to the opposite side of the platform, from the pull rope, is also recomended to prevent accidentally pulling the QuadPod over.

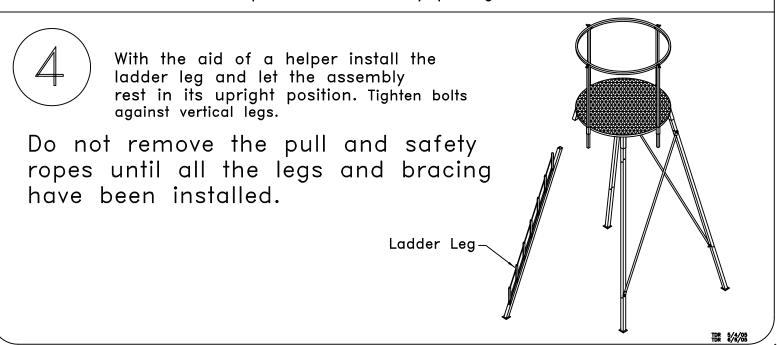

RealBark® Assembly Instructions For QP-12 QuadPod



Complete the assembly by installing the remaining braces. All braces are equal lengths. Tighen all hardware after the QuadPod assembly is complete.

See QuadPod Top Assembly, if purchased, for further detail.

